


STACKED QUAD ELECTROSTATICS.  
 SUGGESTED STACKING FRAME CONSTRUCTION  
 USING 1" SQUARE SPEED FRAME TUBING,  
 OR SIMILAR.

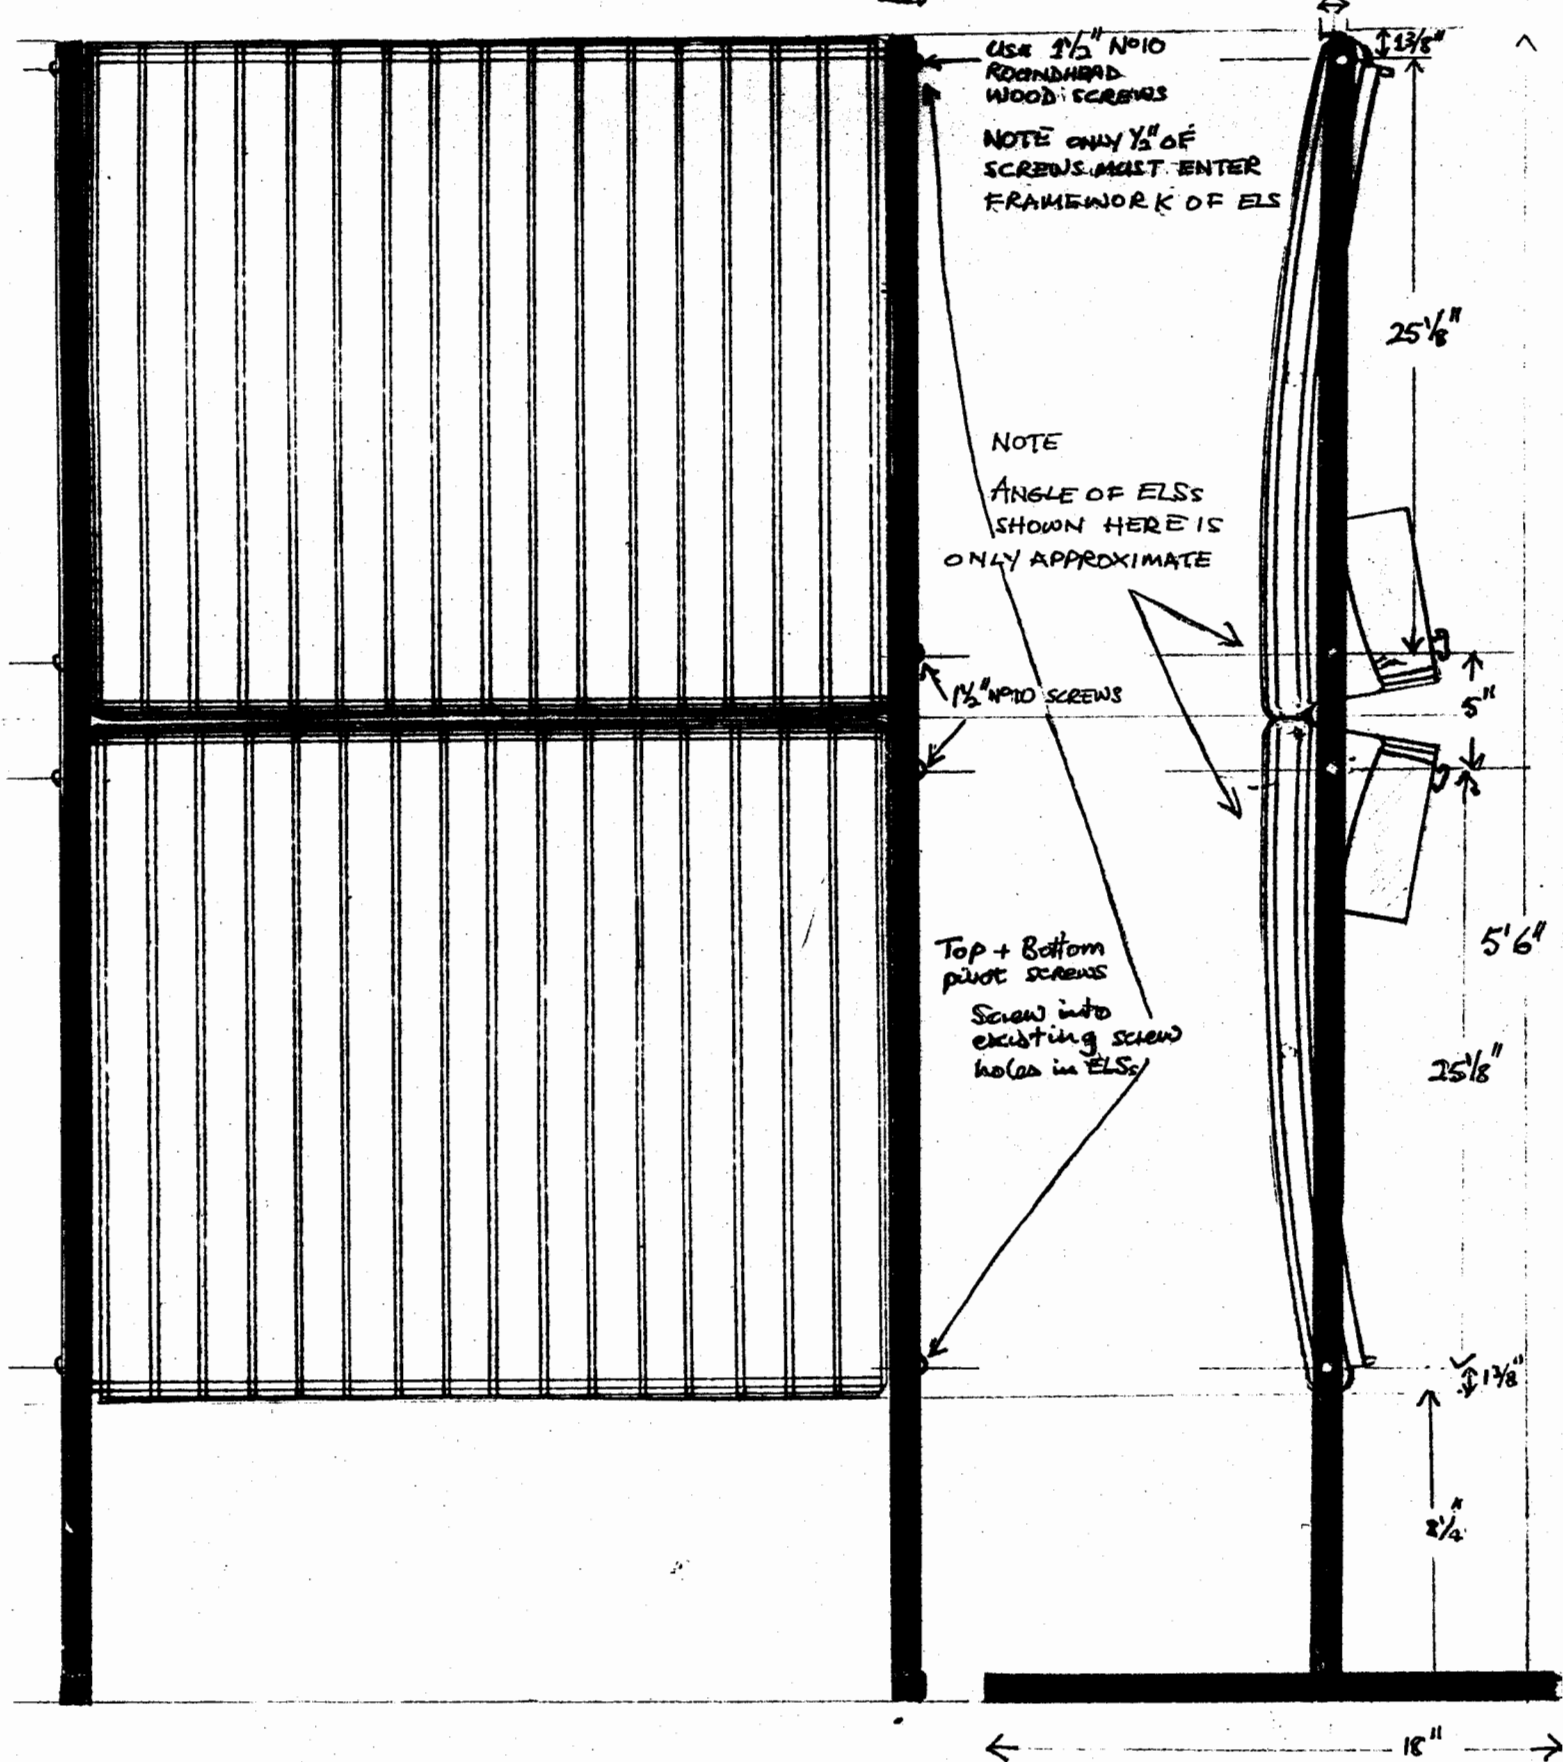

Assembly suggestions.

Note Polished side rails have to be removed to mount speakers in this manner.

Drill Speedframe to accept NO. 10 Woodscrews (a 3/16" hole approx.) in order to assemble

Mount top ELS first, by top pivot screws only, + allow speaker to take up position by gravity, + fix in position by the lower screws. mount lower speaker into frame upside down as shown, by the bottom pivot screws + adjust speaker to line up with upper ELS as shown.